


Artisan Collection

Pecky Butternut Skip Sawn & Time Worn Edges/Ends Flooring




Finish - Endura/Street Shoe Matte
Stain - Native
Edge detail - Time Worn Edge & Ends
Surface - Skip Sawn texture
Thickness - ¾" solid
Widths - 2-1/4", 3", 4", 5"
Grade - Tight Knot & Rustic

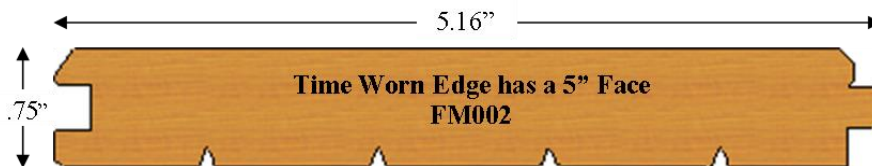

Other Options Available.

Finish - Endura/Street Shoe Satin/Matte, Rubio Hardwax Oil
Stain - Unlimited colors available
Edge detail - Time Worn, Micro Bevel, Square Edge
Surface - Skip Sawn, Artisan Scraped, Time Worn, Burnished, Drift Sawn textures
Thickness - ¾" solid
Widths - 2-1/4", 3", 4", 5", 7", 9", 11" ([Click for pattern detail](#))
Grades - Rustic, Tight Knot, Select

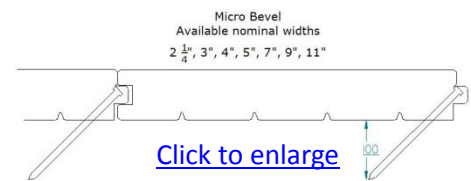

Before receiving delivery of flooring, be sure all masonry, stone, drywall is completed and climate controls operating for at least one week to normal living conditions. Rooms over 10' in width begin installation in center of room and use spline to reverse direction. Recommended 2" long approved flooring serrated nail or staple placed 6" to 8" apart. Nail and glue is best installation method. Leave ½" to ¾" expansion gap along all walls and hide gap with base and shoe.

[Click for full installation details](#)

Skip Sawn - Rough circle sawn surface, worn and softened by footsteps of old
Artisan Scraped - Full, pronounced scraping on the surface, mastered through years of time and trial
Time Worn - Worn over areas diffused throughout the planks, where time and wear have left their legacy
Time Worn Face
Time Worn Edges & Ends
Burnished - Wirebrushed for a slightly eroded and windswept surface
Drift Sawn - Meandering rough circle sawn surface, worn by the elements of time and life

www.kwaterskibros.com

Nation's Largest Selection of Creative Wood Products